


INSTALLATION GUIDE

Firefly INTERNAL Trunking Clip

SIZES: FFC2, FFC3, FFC4, FFC5, FFC6, FFC8

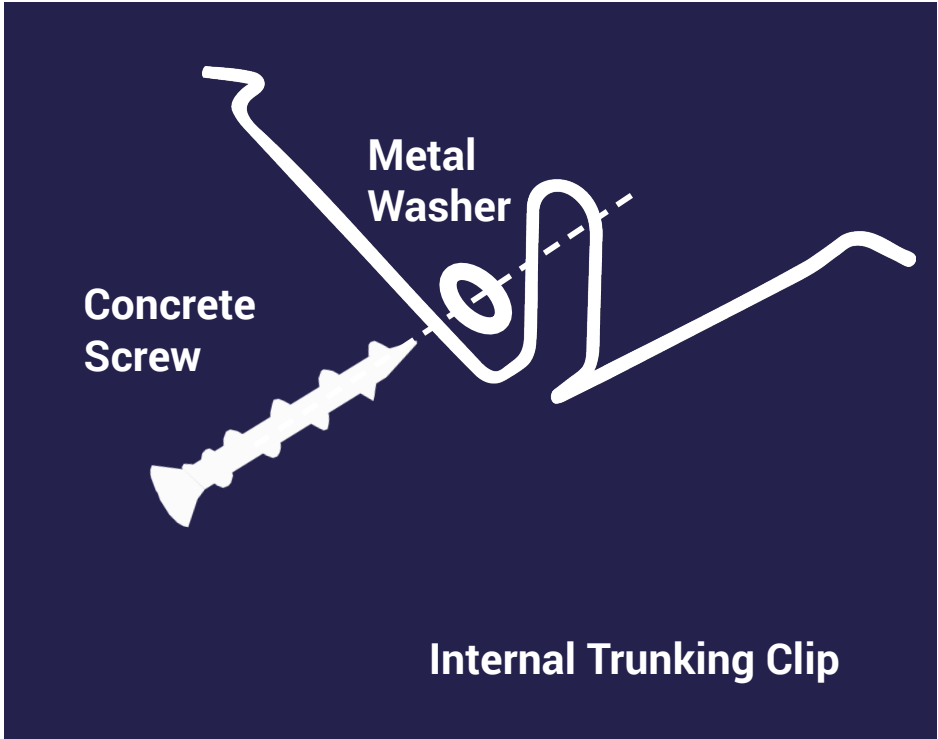

1. Select the correct size clip for the trunking to be used.
2. Acquire the correct concrete screw, supplied at same place as clips.
3. Never use a plastic plug, the fixing must be all metal.
4. Fit the screw fixing through a metal washer then through the clip and into the trunking and finally secure into the substrate.
5. The washer **MUST** be installed across the two sides of the clip to ensure a secure fixing.

SPACING: Use 400mm spacing for vertical spacing. For horizontal spacing use 400mm spacing except over doors, windows or other openings which should be 300mm spacing.

SCREWS: must be used with the correct drill size.

**QUALIFIED
ELECTRICIANS
ONLY.**

